

# OUTDOOR DECORATIVE GAS APPLIANCE

Model No.: 4327FTB

Type of gas: Propane.

Serial No:

Normal Hourly Input: 50,000 BTU/hr.

Date Code:

Manifold Pressure: 11 inch w.c. (2,74 kpa).

Country Code :US/Canada

\*For Outdoor Use Only. If Stored Indoors, Detach and Leave Cylinder Outdoors.\*

\*The gas supply must be turned off at the LP-gas supply cylinder when this appliance is not in use.\*

Minimum Clearance From Unit To Combustible Construction: 60" (152,4cm) from the top;

48" (121,9cm) from all sides and back.

▲CAUTION: The gas pressure regulator provided with this appliance must be used. This regulator

is set for an outlet pressure of 11 inches water column.\*

Min. gas supply for input adj,25 Psi , Max. gas supply: 250 Psi.



Intertek

5021119

**⚠ DANGER**

**RISQUE DE MONOXYDE DE CARBONE**



**This appliance can produce carbon monoxide which has no odor.**

**Using it in an enclosed space can kill you.**

**Never use this appliance in an enclosed space such as a camper, tent, car or home.**

**⚠ WARNING:**

**Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance. An LP-cylinder not connected for use shall not be stored in the vicinity of this or any other appliance.**

Conforms to ANSI STD Z21.97-2017 Certified to CSA STD 2,41-2017 Outdoor decorative Gas Appliance. Cover must be removed when burner is in operation. Removal of this marking will void compliance with standard ANS Z21.97-2017 / CSA 2,41-2017.

Do not connect to a remote gas supply.

For Installation on [or over] Noncombustible Floors Only.

ANS Z21.97-2017-CSA2,41-2017, Outdoor Decorative Gas Appliances

**WARNING:**



**Improper installation, adjustment, alteration, service or maintenance can cause property damage, personal injury or loss of life. Refer to the owner's information manual provided with this appliance. Installation and service must be performed by a qualified installer, service agency, or the gas supplier.**

**FOR YOUR SAFETY:** Surfaces of fire pit can remain extremely hot for a period after use. Allow 45 minutes to cool down before touching or moving the fire pit. The instruction manual contains important information necessary for the proper assembly and safe use of the appliance. Read and follow all warnings and instructions before assembling and using the appliance. Follow all warnings and instructions when using the appliance. Follow all warnings and instructions when using the appliance. If instructions or parts are missing, contact: [service@alau.com](mailto:service@alau.com)

If a cover is provided to protect the appliance burner when the appliance is not in use or during storage of the appliance, the cover shall bear a permanent marking on Class IIA marking material as follows: Cover must be removed when burner is in operation.

## TO LIGHTING

1. Make sure the control knob is in the "OFF" position.
2. Open the door and slowly open the valve on the propane gas tank by turning the knob counterclockwise.
3. Close the door on the body.
4. Push and hold in the electronic igniter to create sparks within the electrode, continue to hold.
5. Push in the control knob and turn to the "LOW" position. Keep holding down the control knob to allow gas to flow for 45 seconds.
6. If ignition doesn't occur within a few seconds release the control knob and rotate to the "OFF" position. Wait for 5 minutes for gas to clear and then repeat the above lighting instructions.
7. Once the fire product is lit, the flame intensity may be controlled by turning the control knob between the "LOW" and "HIGH" positions.

## To Extinguish

1. Turn and push the control knob clockwise to the "OFF" position.
2. Turn the cylinder valve on the gas tank to clockwise to close.

HANGZHOU HANGGE INTERNATIONAL TRADE CO., LTD.

Room 1309, 13th Floor, Building 1, No. 650, bin'an Road, Changhe Street, Binjiang District, Hangzhou City, Zhejiang, CN, 310000

Questions, problems, missing parts? Do not hesitate to contact our customer service before returning the item.

Customer Service Email: [service@alau.com](mailto:service@alau.com)